SHIFT_the future



10,000 KM

NISSAN X-TRAIL

Time: 0.7 Hours



ENGINE MAINTENANCE (Petrol Engine)

Replace engine oil

Replace engine oil filter

CHASSIS AND BODY MAINTENANCE

Inspect brake and automatic transaxle fluids

Inspect brake, clutch and exhaust systems

- Inspect transfer gear oil
- Inspect differential gear oil
- Inspect brake pads, rotors and other brake components
- Inspect foot brake and parking brake

SHIFT the future



20,000 KM

NISSAN X-TRAIL

Time: 2.1 Hours



ENGINE MAINTENANCE (Petrol Engine)

- Adjust intake and exhaust valve clearances (Severe conditions only)
- Replace engine oil
- Replace engine oil filter
- Inspect cooling system
- Replace engine oil filter

CHASSIS AND BODY MAINTENANCE

- Inspect brake, clutch and automatic transaxle fluids
- Replace brake fluid (Severe conditions only)
- Inspect power steering fluid and lines
- Inspect brake, clutch and exhaust systems
- Inspect manual transaxle gear oil
- Inspect transfer gear oil
- Inspect differential gear oil >>

CHASSIS AND BODY MAINTENANCE (CONTINUED)

- Inspect steering gear and linkage, axle & suspension parts & front driveshafts
- Inspect wheel alignment (if necessary rotate
 tyres and balance wheels)
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Lubricate locks, hinges & hood latch
- Inspect seat belts, buckles, retractors, anchors & adjuster
- Inspect foot brake, parking brake and clutch

SHIFT_the future



30,000 KM

NISSAN X-TRAIL

Time: 0.7 Hours



ENGINE MAINTENANCE (Petrol Engine)

Replace engine oil

Replace engine oil filter

- Inspect brake, clutch and automatic transaxle fluids
- Inspect brake, clutch and exhaust systems
- Inspect transfer gear oil
- Inspect differential gear oil
- Inspect brake pads, rotors and other brake components
- Inspect foot brake and parking brake and clutch

SHIFT the future



40,000 KM

NISSAN X-TRAIL

Time: 2.9 Hours



ENGINE MAINTENANCE (Petrol Engine)

- Inspect and adjust drive belts
- Adjust intake and exhaust valve clearances (Severe conditions only)
- Replace engine oil
- Replace engine oil filter
- Check and correct engine coolant mixture ratio
- Inspect cooling system
- Inspect fuel lines
- Replace spark plugs
- Inspect EVAP vapour lines
- Inspect heated oxygen sensor

CHASSIS AND BODY MAINTENANCE

- Inspect brake, clutch and automatic transaxle fluids
- Replace brake fluid
- Inspect brake booster vacuum hoses, connections & check valve >>

- Inspect power steering fluid and lines
- Inspect brake, clutch and exhaust systems
- Inspect manual transaxle gear oil
- Replace automatic transaxle fluid (Severe conditions only)
- Inspect transfer gear oil
- Replace differential gear oil
- Inspect steering gear and linkage, axle & suspension parts & driveshafts
- Inspect wheel alignment (if necessary rotate tyres and balance wheels)
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Lubricate locks, hinges & hood latch
- Inspect seat belts, buckles, retractors, anchors & adjuster
- III Inspect foot brake and parking brake

SHIFT_the future



50,000 KM

NISSAN X-TRAIL

Time: 0.9 Hours



ENGINE MAINTENANCE (Petrol Engine)

- Replace engine oil
- Replace engine oil filter
- Replace air cleaner filter
- Fuel filter (In-tank type) (Severe conditions only)

- Inspect brake, clutch and automatic transaxle fluids
- Inspect brake, clutch and exhaust systems
- Inspect transfer gear oil
- Inspect differential gear oil
- Inspect brake pads, rotors and other brake components
- Inspect foot brake and parking brake and clutch

SHIFT the future



60,000 KM

NISSAN X-TRAIL

Time: 2.2 Hours



ENGINE MAINTENANCE (Petrol Engine)

- Adjust intake and exhaust valve clearances (Severe conditions only)
- Replace engine oil
- Replace engine oil filter
- Inspect cooling system

CHASSIS AND BODY MAINTENANCE

- Inspect brake, clutch and automatic transaxle fluids
- Replace brake fluid (Severe conditions only)
- Inspect power steering fluid and lines
- Inspect brake, clutch and exhaust systems
- Inspect manual transaxle gear oil
- Inspect transfer gear oil
- Inspect differential gear oil
- Inspect steering gear and linkage, axle &
 suspension parts & driveshafts >>

CHASSIS AND BODY MAINTENANCE (CONTINUED)

- Inspect wheel alignment (if necessary rotate tyres and balance wheels)
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Lubricate locks, hinges & hood latch
- Inspect seat belts, buckles, retractors, anchors & adjuster
- Inspect foot brake and parking brake

SHIFT_the future



70,000 KM

NISSAN X-TRAIL

Time: 0.8 Hours



ENGINE MAINTENANCE (Petrol Engine)

Replace engine oil

Replace engine oil filter

- Inspect brake, clutch and automatic transaxle fluids
- Inspect brake, clutch and exhaust systems
- Inspect transfer gear oil
- Inspect differential gear oil
- Inspect brake pads, rotors and other brake components
- Inspect foot brake and parking brake

SHIFT the future



80,000 KM

NISSAN X-TRAIL

Time: 3.1 Hours



ENGINE MAINTENANCE (Petrol Engine)

- Inspect and adjust drive belts
- Adjust intake and exhaust valve clearances (Severe conditions only)
- Replace engine oil
- Replace engine oil filter
- Replace engine coolant (Nissan Genuine Coolant)
- Inspect cooling system
- Inspect fuel lines
- Replace spark plugs
- Inspect EVAP vapour lines
- Inspect heated oxygen sensor

CHASSIS AND BODY MAINTENANCE

- Inspect brake, clutch and automatic transaxle fluids
- Replace brake fluid
- Inspect brake booster vacuum hoses, connections & check valve >>

- Inspect power steering fluid and lines
- Inspect brake, clutch and exhaust systems
- Inspect manual transaxle gear oil
- Replace automatic transaxle fluid (Severe conditions only)
- Inspect transfer gear oil
- Replace differential gear oil
- Inspect steering gear and linkage, axle & suspension parts & driveshafts
- Inspect wheel alignment (if necessary rotate tyres and balance wheels)
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Lubricate locks, hinges & hood latch
- Inspect seat belts, buckles, retractors, anchors & adjuster
- III Inspect foot brake and parking brake

SHIFT_the future



90,000 KM

NISSAN X-TRAIL

Time: 0.8 Hours



ENGINE MAINTENANCE (Petrol Engine)

Replace engine oil

Replace engine oil filter

- Inspect brake, clutch and automatic transaxle fluids
- Inspect brake, clutch and exhaust systems
- Inspect transfer gear oil
- Inspect differential gear oil
- Inspect brake pads, rotors and other brake components
- Inspect foot brake and parking brake

SHIFT the future



100,000 KM

NISSAN X-TRAIL

Time: 2.3 Hours



ENGINE MAINTENANCE (Petrol Engine)

- Adjust intake and exhaust valve clearances (Severe conditions only)
- Replace engine oil
- Replace engine oil filter
- Inspect cooling system
- Fuel filter (in-tank type) (Severe conditions only)
- Replace air cleaner filter

CHASSIS AND BODY MAINTENANCE

- Inspect brake, clutch and automatic transaxle fluids
- Replace brake fluid (Severe conditions only)
- Inspect power steering fluid and lines
- Inspect brake, clutch and exhaust systems
- Inspect manual transaxle gear oil
- Inspect transfer gear oil >>

- Inspect differential gear oil
- Inspect steering gear and linkage, axle & suspension parts & driveshafts
- Inspect wheel alignment (if necessary rotate tyres and balance wheels)
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Lubricate locks, hinges & hood latch
- Inspect seat belts, buckles, retractors, anchors & adjuster
- Inspect foot brake, parking brake and clutch